

The **RANGE** Knob can be used to increase or decrease the range setting on the map display or zoom in and out on the video display. While in the Split-Screen mode, pressing the **Map Actv** or **Vid Actv** Softkey determines which display the **RANGE** Knob adjusts. Pressing the softkey to display Map Actv allows the **RANGE** Knob to control the range setting of the map display. Pressing the softkey to display Vid Actv allows the **RANGE** Knob to control the zoom setting of the video display.

**Input Selection**

While on the Aux - Video Page, press the **Input** Softkey to select the EVS or Aux video source.



**NOTE:** Images provided on the Aux-Video page are for supplemental use only.

**ELECTRONIC STABILITY AND PROTECTION (ESP™)**

**ENABLING/DISABLING ESP**

- 1) Turn the large **FMS** Knob to select the Aux Page Group.
- 2) Turn the small **FMS** Knob to select the System Setup Page.
- 3) If necessary, press the **SETUP 2** Softkey to display the 'Aux-System Setup 2' Page. If the 'Aux-System Setup 2' is already displayed, proceed to step 4.
- 4) Press the **FMS** Knob to activate the cursor.
- 5) Turn the large **FMS** Knob to place the cursor in the Stability & Protection field.
- 6) Turn the small **FMS** Knob to select 'Enabled' or 'Disabled'.
- 7) Press the **FMS** Knob to remove the cursor.

ESP Angle of Attack Protection			
	C-172	C-182	C-206
Angle Opposing Force Begins	16°	19°	18°
Max Opposing Force Angle	20°	24°	23°
ESP Disengagement Angle	14°	14°	14°

ESP Angle of Attack Protection by Aircraft Model

Flight Instruments  
 EIS  
 Nav/Comm/XPDR/Audio  
 Flight Management  
 Hazard Avoidance  
 AFCS  
 Additional Features  
 Abnormal Operation  
 Annun/Alerts  
 Appendix  
 Index